



Operating the Opener

Door Status vs. Activation

| Door status |  Activation using Push Button / Transmitter |
|---|--|
| Door at fully open / close position | Door will move to fully close / open position |
| Door is closing | Door will reverse |
| Door is opening | Door will stop |
| Door is stopped as intended in partially open position | Close |
| Photo eye beam broken when closing | Door will reverse - 30 Flashes |
| Door is obstructed while opening | Door will stop - 30 Flashes |
| Door is fully opened and Photo Eye System is obstructed | Door will not close |

Courtesy Light / Buzzer Responses


| Operation / Condition |  Courtesy Light / Responses |
|--|---|
| Opener is initially plugged-in | Flash x 5 |
| Reconnecting power | Flash x 5 |
| "LEARN" button is pressed | Light flashes x 1 |
| Upon activation | Light On for 4.5 minutes |
| Upon activation by remote transmitters | Light On for 4.5 minutes |
| Remote Transmitter / Keyless Entry PIN code accepted | Flash |
| Photo Eye System is obstructed during door-closing | Flashes x 30 |
| The door is obstructed during travel | Flashes x 30 |

Manual Operation

WARNING

To Prevent SERIOUS INJURY or DEATH:

- Use Emergency Release to disconnect Trolley ONLY when the door is CLOSED to prevent unexpected rapid falling in case of a unbalanced / poor-conditioned door.
- Use Emergency Release ONLY when doorway is clear of persons and obstructions.
- DO NOT use Emergency Release to pull the door open or closed.

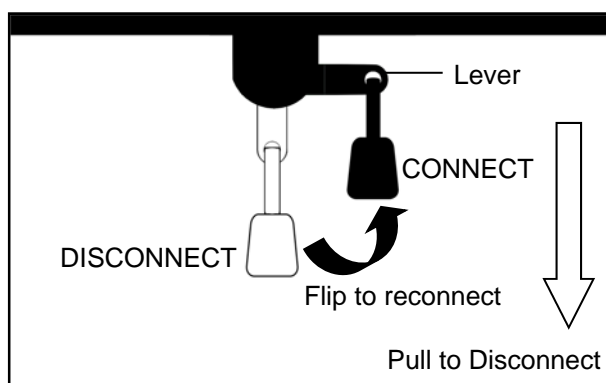

In case of a power failure or door obstruction, PULL EMERGENCY Knob to release door from Opener.

To Disconnect Trolley for Manual Operation

With the door closed, pull down the emergency release knob to the DISCONNECT position. The door can be raised / lowered manually.

To Re-connect Trolley

Pull the knob toward the Opener so that the lever will flip up to the CONNECT position. The Trolley will reconnect itself when the Opener is activated or when the door is manually opened/closed.