



Operating the Opener

Door Status vs. Activation

Door status	 Activation using Push Button / Transmitter
Door at fully open / close position	Door will move to fully close / open position
Door is closing	Door will reverse
Door is opening	Door will stop
Door is stopped as intended in partially open position	Close
Photo eye beam broken when closing	Door will reverse - 30 Flashes
Door is obstructed while opening	Door will stop - 30 Flashes
Door is fully opened and Photo Eye System is obstructed	Door will not close

Courtesy Light / Buzzer Responses


Operation / Condition	 Courtesy Light / Responses
Opener is initially plugged-in	Flash x 5
Reconnecting power	Flash x 5
"LEARN" button is pressed	Light flashes x 1
Upon activation	Light On for 4.5 minutes
Upon activation by remote transmitters	Light On for 4.5 minutes
Remote Transmitter / Keyless Entry PIN code accepted	Flash
Photo Eye System is obstructed during door-closing	Flashes x 30
The door is obstructed during travel	Flashes x 30

Manual Operation

WARNING

To Prevent SERIOUS INJURY or DEATH:

- Use Emergency Release to disconnect Trolley ONLY when the door is CLOSED to prevent unexpected rapid falling in case of a unbalanced / poor-conditioned door.
- Use Emergency Release ONLY when doorway is clear of persons and obstructions.
- DO NOT use Emergency Release to pull the door open or closed.

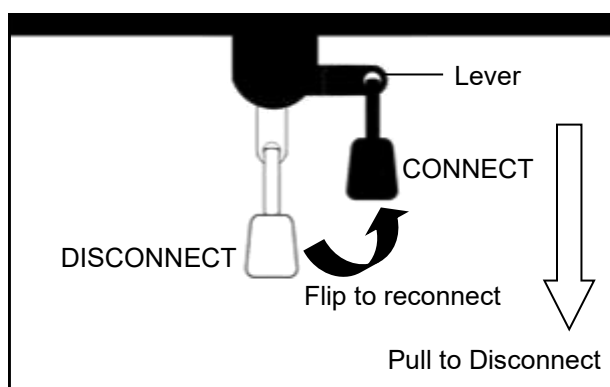

In case of a power failure or door obstruction, PULL EMERGENCY Knob to release door from Opener.

To Disconnect Trolley for Manual Operation

With the door closed, pull down the emergency release knob to the DISCONNECT position. The door can be raised / lowered manually.

To Re-connect Trolley

Pull the knob toward the Opener so that the lever will flip up to the CONNECT position. The Trolley will reconnect itself when the Opener is activated or when the door is manually opened/closed.