

# Connecting Wall Panel

## **WARNING**

To prevent **SERIOUS INJURY** or **DEATH** from electrocution:


- Power **MUST NOT** be connected until instructed.

To prevent **SERIOUS INJURY** or **DEATH** from using the Wall Panel or Push Button and a closing door:

- Install the Wall Panel or Push Button within sight of the door at a minimum height of 5 feet (1.5m) above the floor. Make sure it is out of the reach of children and moving parts of door and hardware.
- **NEVER** permit children to access the Wall Panel, Push Button or remote Transmitters.
- Operate the door **ONLY** when it is adjusted properly with no obstructions present and is in clear sight.
- **ALWAYS** keep a moving door in sight until it's completely closed.
- **NEVER** cross the path of a moving door.



**NOTICE:** This opens wall button will not work until you set the travel limits and the auto force adjustment. You must follow all steps located on pages 16,17,18.

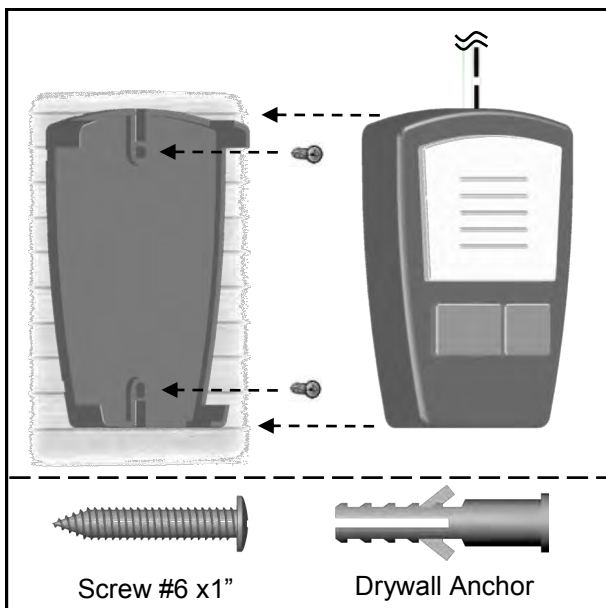 

**Fig. 1**


The Wall Panel is a wired, illuminated door control placed inside your garage.

### To install the Wall Panel:

1. Inside your garage, install the back plate of the Wall Panel within sight of the door at a minimum height of 5 feet (1.5m) off the ground. Ensure it is installed out of the reach of children and free from the moving parts of the door and hardware.
2. Fasten it to a solid surface with 1" screws. If attaching to drywall or other hollow surface, drill 3/16" holes and use the provided Drywall Anchors.
3. Snap the Wall Panel onto the back plate.

### To Connect the Wall Panel to the Opener

Connect the plug from the Wall Panel to the "Wall Panel" outlet on the rear of the Opener, as shown in Fig.2.

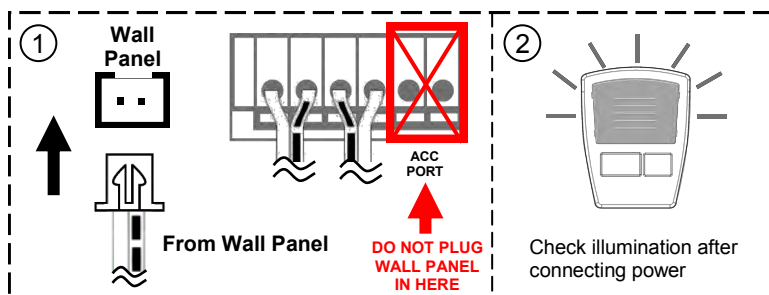 

**Fig. 2**

### Using the Wall Panel

(ONLY after installation is completed )

 


**Door** — Press and release to access the door




**Light** — Turns the courtesy light On/Off

### Vacation Lock



 **Unlock** — Sliding to the left **ACTIVATES** all remotes, wall panel and accessories and dims the red illuminated wall panel main button.



**Lock** — Sliding to the right **DEACTIVATES** all remotes, wall panel and accessories and brightens the red illuminated wall panel main button.

