


PARK ASSIST INSTRUCTIONS

Model: 30275 Sku: 425-1000 • Customer Support: 800-495-9278

Customer Support:
www.gdohelp.com
1-800-495-9278

Inventory:

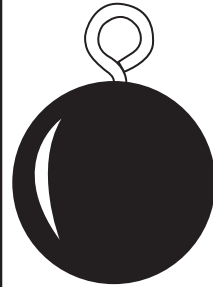

A One Ball


B One Line



C Four Eyelet Screws


⚠ CAUTION KEEP PARK ASSIST OUT OF THE REACH OF CHILDREN

PERMANENT INSTALL: Simply park your vehicle in the garage at the desired location. Tie line (B) to eyelet screw (C-1) attached to ball (A). Place ball (A) onto the vehicle's windshield, directly in front of the steering wheel is recommended. Attach one eyelet screw (C-2) into the ceiling directly above that point. Insert line (B) through the eyelet screw (C-2) in ceiling and pull it through until the ball (A) lightly rests on the windshield. Tie line (B) onto eyelet screw (C-2) and remove any excess line. This puts the park assist in a permanent position. When you park in the garage, simply pull the vehicle in so the ball rests on the windshield in the same location you initially set the park assist. This will result in your vehicle being parked in the same desired location every time.

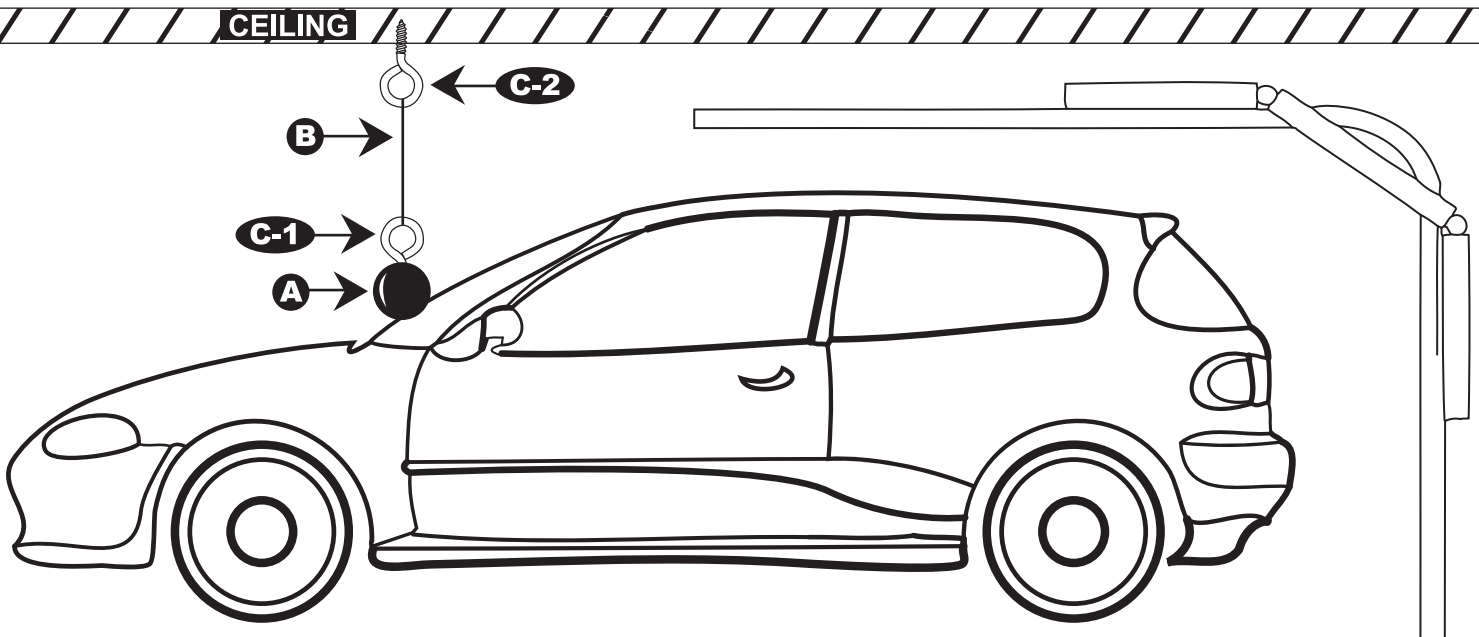

FLIP OVER FOR RETRACTABLE INSTALLATION INSTRUCTIONS

RETRACTABLE INSTALLATION: You can make your park assist retractable with a little more work. Loosely tie one end of the line (B) onto the eyelet (C-1) mounted in the ball (A). You will need to remove the line (B) later. Using the line (B) in the ball (A) hold the line (B) directly over the place where you desire the ball (A) to rest on the windshield. Note: For 7ft garage doors you will need 52" (56" 8ft door) between the bottom of the ball (B) and the ceiling for this to work, so make the desired position low enough on the windshield. If you do not have correct clearance please call 1-800-495-9278 for solutions. After you have determined the desired position on the windshield, mark that point on the ceiling or joist (point D). From point D mount one screw eyelet 4" forward of point D (C-3) and another eyelet 4" behind point D (C-2). From point D go directly to the top of the garage door and mount a eyelet (C-4). The eyelet (C-4) must be in line with eyelet (C-2) and eyelet (C-3). Now remove the line (B) from the eyelet (C-1) in the ball. Take one end of the line (B) and tie it firmly to C-4. Then thread the other end of the line through eyelet (C-2). Grab the ball (A) and continue to thread the line (B) through the eyelet (C-1) in the ball. Take the end of the line and continue with it to the last eyelet (C-3). Pull it through eyelet (C-3) until the ball (A) rests on the desired location on the windshield. Once you have the ball (A) positioned on the desired place on the windshield, tie off the final knot on eyelet (C-3). Activate the Opener and watch it work. If for some reason the line gets cut during set up, grab your fishing pole, the line (B) is off the shelf, 8lb. XT line. Replace the line (B) and give it another try. Installation video available under Park assist at <http://www.gdohelp.com>.

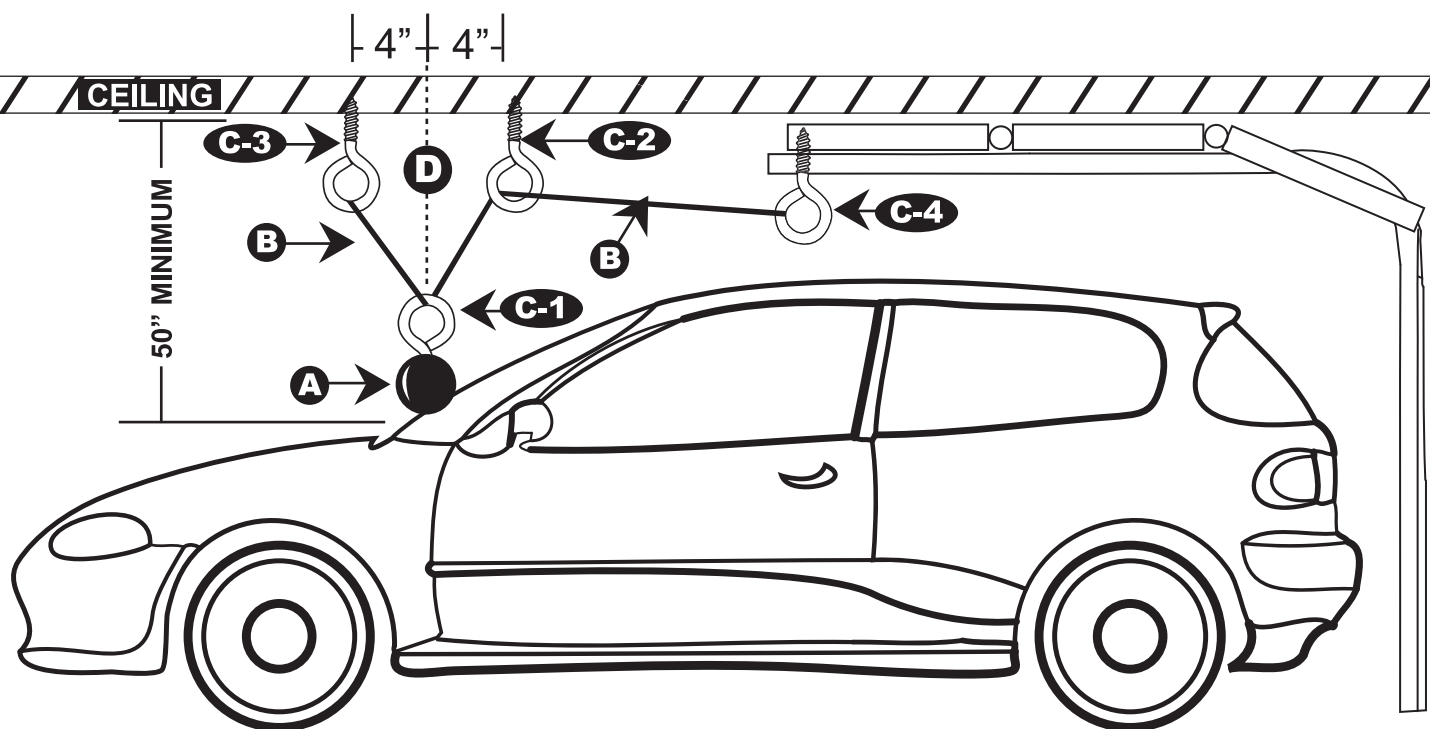

FLIP OVER FOR PERMANENT INSTALLATION INSTRUCTIONS